


KITS INCLUDE:

- 1 – Black, Pre-Drilled, insert panel
- 1 – Steel Plate with set in Screws
- 1 – Keyboard – Magnetic
- 1 – Adapter Cable
- 1 – Small Slit-Grommet, Rubber
- 4 – 8.32 Star Nuts

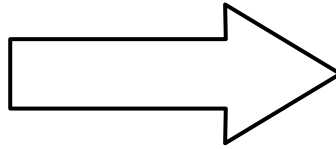

REMOVE FRONT PANEL FROM CONTROL


If your keyboard is like this.....



**Remove old "skin" Keyboard from your Front Panel.
SAVE ALL THE NUTS & SCREWS to re-mount the new keyboard.**

DISMANTLE ASSEMBLED KEYBOARD:

1. Remove 4 Star Nuts from back.
2. Remove Adapter
3. Slowly lift Black Insert Panel off– Slide Grommet & Cable out of keyhole **GENTLY**.
Black Insert Panel replaces old removed Skin Keyboard.
4. Important: As you're facing the **BACK** of your Front Panel – "Keyhole" of Black Insert Panel is to the **LEFT**, and **WIDER SPACE** above screw holes, towards the top.
5. Mount Black Panel using Nuts & Screws saved from old keyboard removal.
6. **INSERT KEYBOARDS CABLE & GROMMET INTO KEYHOLE –GENTLY SLIDE GROMMET TO END – adjust cable length from keyboard to grommet. (3-4")**
7. Line up Steel Plate's setscrews from **FRONT** of Black Panel and attach using Star Nuts provided.

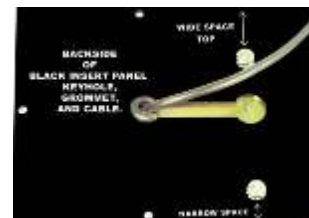

NOTE: This Steel Plate is on the Front of FRONT PANEL, where as the Black Insert is in the back of Front Panel.

8. Slip Magnetic Keyboard over to attach to Steel Plate. Adjust.
9. Attach Adapter to Keyboard Cable – **PLUG** into Mother Board!
10. Replace Front Panel to Control/Computer. Re-attach all cables, reseating tightly. **Finished!**

If your keyboard is like this.....



REMOVE FRONT PANEL FROM CONTROL

Remove old Keyboard from your Front Panel.

DISMANTLE ASSEMBLED KEYBOARD:

1. Remove 4 Star Nuts from back.
2. Remove Adapter
3. Slowly lift **Black Panel Insert off** – Slide Grommet & Cable out of keyhole **GENTLY**.
Important: You will not use this panel for this keyboard replacement.
(Black Insert Panel replaces old "Skin" Style Keyboards)
4. **INSERT KEYBOARDS CABLE & GROMMET INTO KEYHOLE –GENTLY SLIDE GROMMET TO END –**
adjust cable length from keyboard to grommet. (3-4")
5. Attach Steel Plate to outside front, of **FRONT** Panel, using Star Nuts provided.
6. Slip Magnetic Keyboard over to attach to Steel Plate. Adjust.
7. Attach Adapter to Keyboard Cable – **PLUG** into Mother Board!
8. Replace Front Panel to Control/Computer. Re-attach all cables, reseating tightly. **Finished!**

